


- **BMW Mini (R56)**
with automatic climate control

Compatible with double DIN devices

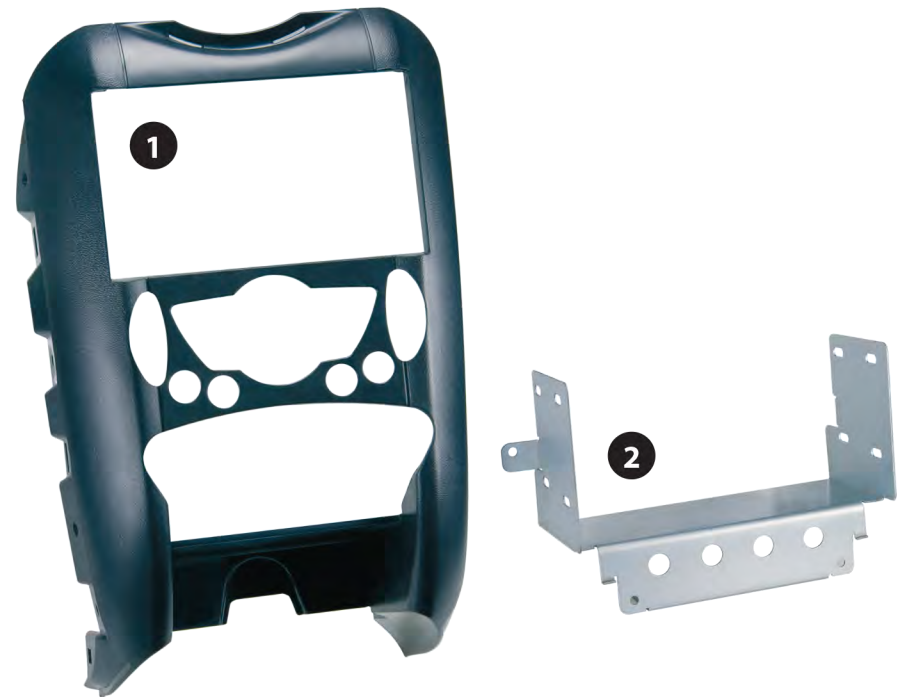

Double DIN Kit contents


- (1) Center console
- (2) Mounting Bracket

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

Installation Kit CT23BM02




1. BMW Mini (R56) with automatic climate control

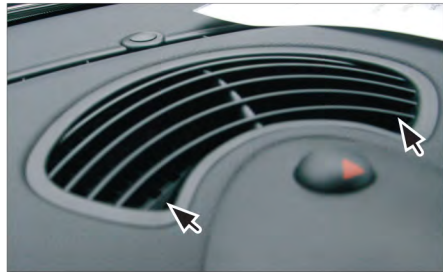

2. Clip out the air vent grill at the top of the dashboard

Remove 2 screws
(see arrows)

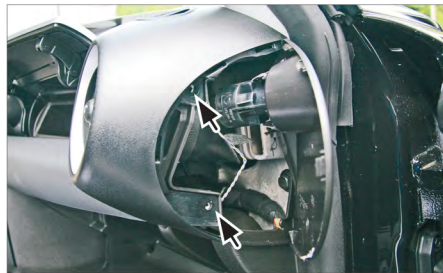

3. Unclip side panel

Remove 2 screws (see arrows)



4. Open the glove box.
Remove decor panels at both sides

Remove screw under air vent
left and right side

Installation Kit CT23BM02



5. Remove screw beside air vent



6. Remove cover of harzard light switch



7. Remove 2 screws of the rev counter

Remove decor panel



8. Remove 4 screws of the knee protector

proceed with step 9 on next page

Installation Kit CT23BM02

9. Open the lower glove box

Remove 3 screws

Remove knee protector

10. Unclip and remove side panels of the center console

Remove 4 screws
(2 at each side)

Remove center console by pulling it towards your direction

11. Remove 4 screws, see arrows

Take out speedometer unit and head unit

12. Remove air condition control unit

Installation Kit CT23BM02

13. Fix the Double-DIN navigation with the mounting bracket

14. Connect all required circuit points

Place the Double-DIN head unit at the dash board

Fix it with 2 screws

15. Mount the air condition control unit

Place new center console

Install everything in reverse order to finish installation

